1991 M30 CONVERTIBLE SERVICE MANUAL SUPPLEMENT

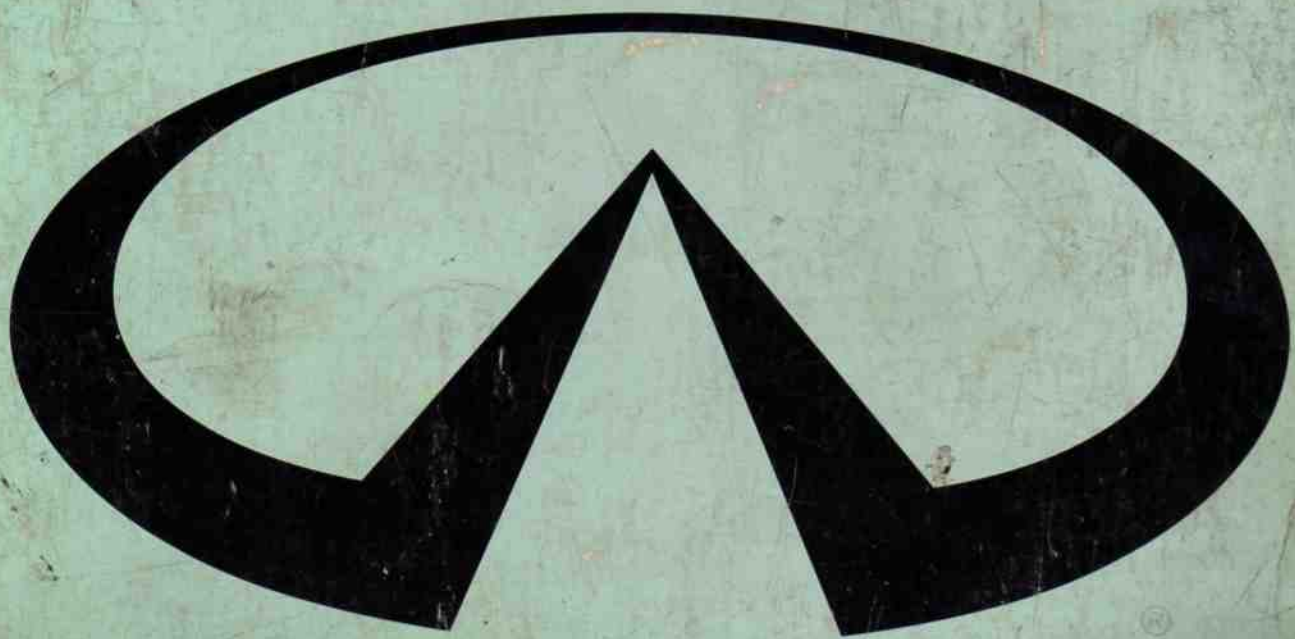

INFINITI M30 CONVERTIBLE SERVICE MANUAL SUPPLEMENT

TABLE OF CONTENTS

	Page
General Information	C-2
"Normal" Top-Down, Top-Up Operation	C-2
Convertible Top Stack Timing Sequence	C-5
Safety Information on Convertible Top Operation	C-6
Top and Rear Window Appearance Care	C-7

Convertible Component Repair Information	Section
Windshield Header Trim	1
Power Pull Down Actuators	2
Windshield Outer Moldings	3
Quarter Belt, Back Belt and Deck Lid Moldings	4
Rear Seat	5
Quarter Trim Panel	6
Seat Belts	7
Quarter Glass, Guide and Regulator	8
Side Guard Molding	9
Door, Guide Pin and Glass	10
Weatherstrips and Retainers	11
Headliner	12
Top Cover Assembly	13
Backlite Assembly	14
Stay Pads, Side and Rear	15
No. 1 Bow	16
No. 2 Bow	17
No. 3 Bow	18
No. 4 Bow	19
Deck Lid Spoiler and High Mount Stop Light	20
Deck Lid, Hinges	21
Hydraulic System, Pump/Motor and Cylinders	22
Electrical, Controls	23
Electrical, Troubleshooting	24
Electrical Wiring Diagrams	25
Body, Structural	26
Index	27

Symptoms	Preliminary Check #1	Preliminary Check #2	Preliminary Check #3	Preliminary Check #4	Diagnostic Procedure #1	Diagnostic Procedure #2	Diagnostic Procedure #3	Diagnostic Procedure #4	Diagnostic Procedure #5	Control Unit Ground	Door and Quarter Glass System Ground
Power pull down system does not work in "up" and "down" mode.	●	●	●		●					●	
Hydraulic pump/motor does not work in the "up" and "down" mode.	●	●	●	●		●				●	
Door and quarter glass do not operate "down" in the "up" or "down" mode.	●	●	●				●			●	●
Side and quarter glass do not operate in the "up" mode.	●	●	●	●				●		●	●
Top stops operating after one (1) second of operation in the "up" mode.	●	●		●					●	●	
Tops stops operating after three (3) seconds of operation in the "down" mode.	●	●		●					●	●	